

# User Guide

## Steering wheel control Interface



### Setting the Clock and Date

1. Press and hold 'MENU' to enter clock setting mode
2. Press CH + and CH - to toggle between hour, minute, date, month and year. The relevant character will flash when selected
3. To change the value, press Vol + and Vol -
4. Once the time and date has been set, press and hold 'MENU' to exit clock setting mode.