

User Guide

Steering wheel control Interface

864043



Setting the Clock and Date

1. Press and hold 'MODE' to enter clock setting mode
2. Press VOL + and VOL - to toggle between hour, minute, date, month and year. The relevant character will flash when selected
3. To change the value, press CH + and CH-
4. Once the time and date has been set, press and hold 'MODE' to exit clock setting mode.

